



MAP[®]
MOTORIST ASSISTANCE PLAN

Vehicle Service Contract

YOU LIKE HAVING CHOICES!



Your choices reflect who you are, and they fulfill your needs.

Well, your unique needs are met when you choose a MAP Vehicle Service Contract.

MAP provides you with the right coverage for your driving habits and at the right price for your budget.

You won't pay the same as the person next door that has an older vehicle and drives farther than you do every day.

Choose your coverage based on the miles you drive

Choose the deductible that suits your budget

Choose the Star coverage that's best for you

**IT'S YOUR CHOICE.
Choose a MAP Vehicle Service Contract!**



LOOK INSIDE

for all the
parts that
are covered

4 STAR COVERAGE



WHAT'S NOT COVERED

Exhaust system, catalytic converter, manual clutch assembly, manual clutch pedal, shock absorbers, alignments, wheel balances, tires, wheels, fan belts, accessory drive belts, spark plugs, filters, flexible hoses; brake rotors and drums; brake pads and shoes; lenses, sealed beams, light bulbs, head lamps, tail lamps, high mount stop lamps, battery, battery cables, spark plug wires; distributor cap and rotor; paint, carpet, bright metal, trim, sheet metal, bumpers, body panels, glass, physical damage, moldings, upholstery, weather strips, canvas top, vinyl top, fabric top, fiberglass top; air and water leaks; wind noise, squeaks and rattles; coolants and lubricants; refrigerants, tune ups, and maintenance services.

SEALS and GASKETS - leaking seals and gaskets on any covered part listed above. Minor loss of fluid or seepage is considered normal and is not considered a mechanical breakdown.

See contract for details.



Guess how
many parts ARE
covered with your
coverage!?

ENGINE: Apex Seals Balance Shaft Block Cam Button Camshaft Camshaft Bearings Compression Rings Connecting Rod Bearings Connecting Rod Bolts Connecting Rod Caps Connecting Rods Crankshaft EGR Valve Engine Mounts Exhaust Manifold Exhaust Manifold Bolts Exhaust Valves Flex Plate Flywheel Freeze Plugs Front Crank Pulley Bolt Harmonic Balancer	Head Bolts Heads Intake Manifold Intake Manifold Bolts Intake Valves Intercooler Lifters Main Bearing Caps Main Bearings Main Bolts Oil Pan Oil Pump Oil Pump Cover Oil Pump Gears Oil Pump Pressure Release Valve Oil Pump Screen O-Rings Wrist Pins Pistons Pushrods Rocker Arm Pivots Rocker Arm Shaft Rocker Arms Rotor Housing Rotors Shims	Silent Shaft Sleeves Springs Supercharger Timing Belt Timing Chain Timing Cover Timing Gears Timing Guides Timing Tensioners Turbocharger Vacuum Pump Valve Adjusters Valve Cover(s) Valve Guides Valve Keepers Valve Retainers Valve Seals Valve Seats Wastegate Water Pump Cam Plug Oil Cooler Oil Cooler Lines Oil Filter Adapter Oil Pan Plug Side Cover Thermostat Housing	Valve Cover Filler Cap Water Pump Pulley VEHICLE HARDWARE: Ash Tray Ash Tray Bracket Bumper Impact Absorbers Courtesy Light Switches Door Hinges Glove Box Lock Assembly Headlamp Mounting Buckets Hood Hinges Hood Latch Hood Release Cable Hood Springs Inner Door Handles Liftgate Supports Manual Seat Track Assembly Outer Door Handles Parking and Side Lamp Bodies	Parking and Side Lamp Sockets Trunk Hinges Trunk Lid Striker Plate Trunk Torsion Bars Door Latches Door Linkages Door Strikers Gas Tank Door Latch Gas Tank Door Release Cable Glove Box Latch Hatch Hinges Hood Supports Liftgate Supports Power Seat Adjusters Power Seat Cables Power Seat Track Assembly Power Seat Transmission Seat Back Release Mechanism Sun Roof Cables Sun Roof Guides Trunk Latch	Trunk Lid Supports Window Handles Window Regulators ABS BRAKES: ABS Booster/Pump ABS Control Processor ABS Master Cylinder ABS Sensors ABS Solenoids ABS Dump Valve STEERING: Ball Guides Ball Nut Bolts Center Link Control Rings Control Valve Cups Drag Link Idler Arm Lock Ring Locknuts Pinion Pinion Shaft Adjuster Pitman Arm	Pitman Shaft Pump Housing Pump Pressure Plate Pump Reservoir Pump Shaft Pump Vanes Rack Housing Rack Shaft Rack Yoke Shims Snap Rings Spool Valve Steering Column Bearings Steering Column Coupling Steering Column Shaft Steering Pump Mounting Bracket Steering Pump Pulley Steering Gear Housing Tie Rod Ends Tie Rods	Washers Worm Shaft Worm Gear Adjuster Yoke Spring Bushings Filler Cap Pinion Seat Pitman Shaft Adjuster Pitman Shaft Seal Pump Reservoir O-Ring Rack Bellows Rack Mounts Rack End Seals Steering Fluid Cooler Steering Fluid Cooler Lines Tilt Wheel Mechanism COOLING SYSTEM: Coolant Recovery Tank Fan	Fan Clutch Fan Motor Fan Shroud Radiator Radiator Mounting Brackets Thermostat Cooling Fan Relay ELECTRICAL: Adaptive Cruise Radar Alternator Bearings Alternator Brushes Alternator Diodes Alternator Field Coils Alternator Housing Alternator Mounting Bracket Alternator Pulley Alternator Rotor Backup Camera Backup Light Switch Brake Light Switch Defroster Switch Door Lock Switch Headlight Switch Horn Switch	Ignition Switch Lane Changing Sensors Manually Operated Switches Map Light Switch Mirror Switch Neutral Safety Switch Power Seat Switch Power Window Switch Rain Sensors Rectifier Bridge Reverse Sensors Starter Amature Starter Brushes Starter Bushings Starter Drive Starter Field Windings Starter Motor Starter Motor Case Starter Solenoid Sunroof Motor Switch Voltage Regulator Wiper Motors
Wiper Switch Wiring Harness Glove Box Light Switch Washer Pump Washer Reservoir Wiper Delay Controller Wiper Motor Linkage	Timing Cover Gasket Transfer Case Seal(s) Transmission Pan Gasket Valve Cover Gasket(s)	Strut Mounts Torsion Bar Mounts Track Bar Bushings Track Bar Links Track Bars Upper Control Arms Wheel Bearings King Pin Bushings King Pins Spindle Supports	Variable Suspension Air Tubes Variable Suspension Control Processor Variable Suspension Sensors Variable Suspension Struts Variable Suspension Switches	Half Shafts Locking Hub Assembly Pinion Gear Pins Positraction Clutches Positraction Plates Positraction Springs Retainers Ring Gear Shaft Couplings Shims Side Gears Slip Joint Spyder Gears U-Joints Yokes 4X4 Engagement Actuator/ Motor Case Vent Differential Cover Differential Plug(s)	Combination Valve Disk Brake Calipers Hold Down Nails Hold Down Springs Hydro-Boost Unit Master Cylinder Master Cylinder Seals Metal Brake Line Fittings Metal Brake Lines Metering Valve Parking Brake Adjuster Parking Brake Cable Parking Brake Lever Parking Brake Pedal Parking Brake Ratchet Assembly Pressure Differential Switch Proportioning Valve Residual Pressure Check Valve Return Springs Self-Adjuster Mechanism Vacuum Booster Wheel Cylinder Seals Wheel Cylinders Brake Wear Sensors	MEMORY SEAT &STEERING WHEEL: Activator Switches Control Processor Motors Solenoids Switches POWERTRAIN ELECTRONICS: Air Flow Meter Barometric Pressure Sensor Coolant Sensor Cooling Fan Control Processor Cooling Fan Sensors Crankshaft Position Sensor Ignition Coil Distributor Distributor Gear Hall Effect Switch IAC Motor Knock Sensor MAP Sensor Mechanical Advance Mixture Control Processor Mixture Control Sensors Oxygen Sensor Pickup Coil	Pole Piece Throttle Position Sensor Timing Control Sensors Transmission Shift Control Processor Transmission Shift Control Sensors Vacuum Advance Vehicle Speed Sensor Air Control Solenoid Air Regulator Valve EFE Heater FUEL SYSTEM: Accelerator Cable Accelerator Linkage Accelerator Pedal Accelerator Pump Carburetor Air Horn Carburetor Bowl Carburetor Jets Carburetor Linkage Carburetor Needle Carburetor Power Valve Carburetor Seat Carburetor Venturi Check Balls Choke Choke Butterfly Choke Cover Choke Pull-Off Choke Spring	Float Fuel Fittings Fuel Injection Distribution Rails Fuel Injection Pump Fuel Injectors Fuel Level Sending Unit Fuel Pressure Regulator Fuel Pump Fuel Tank Metal Fuel Lines Metering Rods Throttle Body Throttle Linkage Throttle Plate Throttle Shaft Carburetor Base Plate Carburetor Gaskets Fuel Tank O-Ring Throttle Body Gaskets INTERIOR CLIMATE: A/C Compressor A/C Compressor Clutch A/C Compressor Coil A/C Compressor Mounting Bracket A/C Compressor Pulley	Accumulator Blower Motor Condenser Control Cables Ducts Evaporator Expansion Valve Heater Control Valve Heater Core Idler Pulley Idler Pulley Bearing Idler Pulley Mounting Bracket Orifice Tube Plenum Doors PDA Valve Receiver - Dryer Serpentine Belt Tensioner Serpentine Belt Tensioner Bearing Serpentine Belt Tensioner Pulley A/C Muffler High/Low Cut-Off Switches Manifold Plenum Door Motors Programmer Shrader Valve Caps Shrader Valves Temperature Sensors Assembly Power Winch Motor Power Winch Rollers Remote Control Wiring Harness Skid Plates Tow Hooks Auxiliary Fuel Tank and Cut-Over Switch Bed-Mounting Fifth Wheel Hitch Insert and Wiring Receptacle Running Light Bodies Trailer Hitch Receiver Tailgate Handle Tailgate Hinges & Latches Tailgate Lock & Cables Locking Hub
SEALS & GASKETS: Axle Gaskets Axle Seals Cam Housing Gasket(s) Compressor Line O-Rings Compressor Seals CV Joint Boots Cylinder Head Gasket(s) Differential Gasket(s) Exhaust Manifold Gasket(s) Oil Pan Gasket Output Shaft Seal Pinion Seal Rear Main Seal Shifter Seal Speedometer Cable Seal Steering Pump Shaft Seal	Control Arm Control Arm Shafts Hub Bearings Leaf Spring Bushings Leaf Spring Shackles Leaf Springs Lower Control Arms MacPherson Strut Cardidges MacPherson Strut Housings Spindles Spring Shackles Stabilizer Bar Bushings Stabilizer Bar Links Stabilizer Bars Steering Knuckles Strut Bar Bushings Strut Bar Links Strut Bars	SUSPENSION: Ball Joints Coil Springs Control Arm Bushings Control Arm Shafts Hub Bearings Leaf Spring Bushings Leaf Spring Shackles Leaf Springs Lower Control Arms MacPherson Strut Cardidges MacPherson Strut Housings Spindles Spring Shackles Stabilizer Bar Bushings Stabilizer Bar Links Stabilizer Bars Steering Knuckles Strut Bar Bushings Strut Bar Links Strut Bars	FOUR-WHEEL STEERING: Center Shaft Power Cylinder Steering Gear Housing Steering Pump Steering Rack Assembly Stepper Motor Stepper Motor Sensors TRACTION CONTROL: Control Processor Linkage Sensors Solenoids DRIVE ASSEMBLY: Axle Flange Axle Shafts Bearings CV Joints Carrier Bearing Center Bearings Differential Carrier Differential Housing Drive Axle Drive Axle Bearings Drive Shaft(s)	MANUAL & POWER BRAKES: Accumulator Bracking Plate Brake Adjusters Brake Pedal Brake Pedal Apply Pin Brake Pedal Lever Brake Pedal Pivot Caliper Seals	INTERNAL ELECTRONICS: Cruise Control Assembly Cruise Control Cables Cruise Control Module Cruise Control Servo Dash-Mounted C.D. Digital Dash Display DVD Player Electronic Climate Control Head Graphic Equalizer Heads-Up Display Projector Heads-Up Display Control Unit Magnetic Tape Player Navigation System Radio Trip/Mileage/Engine	Function Computers Television Video Cassette Player Amplifier Manual Climate Control Selector CONVENIENCE ACCESSORIES: Heated Seat Elements Horn Horn Relay Power Antenna Motor Power Door Lock Actuator Power Door Lock Motor Power Door Lock Relays Power Headlamp Motor	Power Mirror Motors Power Seat Motor Power Sunroof Motor Power Tailgate Motor Power Tailgate Solenoids Power Top Motor Power Trunk Motor Solenoids Power Window Motor Rear Window Defogger Rear Window Defroster Anti-Theft System Components Keyless Entry Module Remote Entry Receiver	Remote Entry Sender SPORT PACKAGE: Mounting Bracket(s) Pop-Out or Sliding Side/Rear Window, Latches & Hinges Running Boards Spare Tire Carrier Spare Tire Swing Arm,Pivot Latches & Locks Swing-Away Mirror Arms and Mounts Cargo Lamp Body Cargo Tie-Downs Tailgate Handle Tailgate Hinges & Latches Tailgate Lock & Cables Locking Hub	
TRANSMISSION: Accumulator Rings Accumulator Seals Accumulators Adjusters Auxiliary Valve Body Bands Bearings Blockers Bolts Boost Valve Bushings Center Support Chain Check Balls Clips Clutch Drums Clutch Pistons Clutch Plates (Automatic) Clutch Seals Clutch Packs Control Rings Cooler	Counter Shaft Detent Cable O-Ring Detent Cam Detent Cam Spring Detent Valve Extension Housing Gears Governor Governor Gear Idler Shaft Input Shaft Intermediate Shaft Main Shaft Manual Master Cylinder Manual Valve Metal Cooler Lines Modulator Valve Mounts Output Shaft Pan Bolts Parking Gear Parking Pawl Planetary Gear	Carrier Planetary Gears Pressure Regulator Valve Pressure Switches Pressure Tap Plugs Pump Cover Pump Gears Pump Guide Rings Pump Housing Pump Vanes Retainers Ring Gears Roll Pins Roller Clutches Separator Plate Servo Rings Servo Seals Servo Shaives Shift Cover Shift Forks Shift Shaft Snap Rings Solenoids	Speedometer Drive Gear Sprags Springs Sprockets Stator Stator Shaft Sun Gear Shell Sun Gears Synchronizer Hub Synchronizer Key(s) Synchronizer Ring Synchronizer Sleeves Synchronizer Springs Synchronizer(s) Throttle Cable Throttle Valve Torque Converter Turbine Transfer Case Housing Transfer Shaft	Transmission Case Vacuum Modulator Valve Body Valve Pack Washers Case Vent Cover Gaskets Detent Cable Dip Stick Dip Stick Tube Dip Stick Tube O-Ring Extension Housing Gasket Governor Cover Inspection Plugs Pan Bolts Range Selector Range Selector Cable Separate Bell Housing(s) Side Cover	INTERNAL ELECTRONICS: Cruise Control Assembly Cruise Control Cables Cruise Control Module Cruise Control Servo Dash-Mounted C.D. Digital Dash Display DVD Player Electronic Climate Control Head Graphic Equalizer Heads-Up Display Projector Heads-Up Display Control Unit Magnetic Tape Player Navigation System Radio Trip/Mileage/Engine	Function Computers Television Video Cassette Player Amplifier Manual Climate Control Selector CONVENIENCE ACCESSORIES: Heated Seat Elements Horn Horn Relay Power Antenna Motor Power Door Lock Actuator Power Door Lock Motor Power Door Lock Relays Power Headlamp Motor	Power Mirror Motors Power Seat Motor Power Sunroof Motor Power Tailgate Motor Power Tailgate Solenoids Power Top Motor Power Trunk Motor Solenoids Power Window Motor Rear Window Defogger Rear Window Defroster Anti-Theft System Components Keyless Entry Module Remote Entry Receiver	Remote Entry Sender SPORT PACKAGE: Mounting Bracket(s) Pop-Out or Sliding Side/Rear Window, Latches & Hinges Running Boards Spare Tire Carrier Spare Tire Swing Arm,Pivot Latches & Locks Swing-Away Mirror Arms and Mounts Cargo Lamp Body Cargo Tie-Downs Tailgate Handle Tailgate Hinges & Latches Tailgate Lock & Cables Locking Hub	

IN VALUE



3 STAR COVERAGE



ENGINE – cylinder block, cylinder heads, all internally lubricated parts, turbocharger, supercharger, harmonic balancer; timing gear, chain and belt; timing cover; intake and exhaust manifolds; valve covers, oil pan, engine mounts, belt tensioners, cam gear bolt, harmonic balancer bolt, and head bolts.

TRANSMISSION – transmission case, all internally lubricated parts, torque converter, flywheel/flexplate, vacuum modulator, transmission mounts, transmission cooler, transmission oil pan, and transmission control module (TCM).

TRANSFER CASE - transfer case, all internally lubricated parts, 4X4 actuator, and 4X4 sensors.

DRIVE AXLES – drive axle housing, all internally lubricated parts, drive shafts, universal joints, constant velocity joints (excludes boot failures), axle bearings, center support/carrier bearings, and differential cover.

AC / HEATING (includes only factory or dealer installed equipment) - condenser, condenser fan/motor, compressor, compressor clutch, compressor pulley, compressor drive motor, evaporator, accumulator, drier, expansion valve, idler pulley, operated A/C controls, electronic A/C control module, heater core, and blower motor.

SEALS and GASKETS - leaking seals and gaskets on any covered part listed above. Minor loss of fluid or seepage is considered normal and is not considered a mechanical breakdown.

See contract for details.

3 STAR COVERAGE



SUSPENSION – electronic stability control system, traction control system, control arms, control arm shafts, and control arm bushings, McPherson struts, wheel/hub bearing assembly; spindles and supports; ball joints; radius arm and bushings; stabilizer bar; links and bushings; torsion bars, coil springs, leaf springs, and suspension air bags.

STEERING – steering gear/rack, all internally lubricated parts, power steering pump, electric steering motor, tire pressure monitoring system, pitman arm, idler arm, tie rod ends, drag link, steering column shaft, and column couplings.

COOLING – water pump, radiator, cooling fan, cooling fan motor, fan clutch, radiator fan shroud, and coolant recovery tank.

FUEL SYSTEM – fuel delivery pump, fuel injection pump, fuel injectors, fuel tank, metal fuel lines, fuel pressure regulator, fuel sending unit, fuel gauge, idle air control (IAC) module/valve, engine control module (ECM), and fuel injection sensors.

BRAKE – master cylinder, power brake cylinder, vacuum assist booster, calipers, wheel cylinders, compensating valve, anti-lock brake system (ABS), hydraulic lines and fittings, and parking brake actuator.

ELECTRICAL – alternator, ignition coils, horns, distributor, starter motor, starter solenoid, starter drive, windshield wiper motors, windshield wiper linkage, windshield washer pump, power seat motor, satellite antenna, power window motors, window regulators, power door lock actuators, power trunk release, wiring harnesses, ignition starting system, all manually operated switches, and driver information gauges and displays.

TECHNOLOGY – entertainment systems (manufacturer installed), reverse camera system, reverse sensing system, proximity sensors, blind spot detection, message center, forward collision warning system, cruise control, and adaptive cruise control.

COMFORT/CONVENIENCE (manufacturer installed only) – keyless entry system, memory seats, sun/moon roof motor, convertible top motor, manual sunshade, hands free trunk open system, and power liftgate/doors.

IF YOUR VEHICLE IS A HYBRID, THE FOLLOWING LIST OF ADDITIONAL COVERED PARTS IS ALSO INCLUDED IN THIS COVERAGE.

HYBRID VEHICLES – control systems, cooling systems, motor/generator/traction motor and all internally lubricated parts, on-board charger, on-board charger connector, on-board trickle charger cable, power invertors, and regenerative braking systems components.



See contract for details.

2 STAR COVERAGE



ENGINE - cylinder block, cylinder heads, all internally lubricated parts, turbocharger, supercharger, harmonic balancer; timing gear, chain, and belt; timing cover, intake and exhaust manifolds, valve covers, oil pan, engine mounts, and belt tensioners.

TRANSMISSION - transmission case, all internally lubricated parts, torque converter, flywheel/flexplate, vacuum modulator, transmission mounts, transmission oil pan, and transmission control module (TCM).

TRANSFER CASE - transfer case, all internally lubricated parts, and 4X4 actuator.

DRIVE AXLES - drive axle housing, all internally lubricated parts, drive shafts, universal joints, constant velocity joints (excludes boot failures), axle bearings, and center support/carrier bearings.

A/C HEATING (includes only factory or dealer installed equipment) - condenser, condenser fan/motor, compressor, compressor clutch, compressor pulley, compressor drive motor, evaporator, operated A/C controls, and electronic A/C control module.

SEALS and GASKETS - leaking seals and gaskets on any covered part listed above. Minor loss of fluid or seepage is considered normal and is not considered a mechanical breakdown.

2 STAR COVERAGE



SUSPENSION – control arms, control arm shafts, control arm bushings, McPherson struts, wheel/hub assembly; spindles and supports; radius arm and bushings; stabilizer bar links and bushings; torsion bars, coil springs, and leaf springs.

STEERING – steering gear/rack, all internally lubricated parts, power steering pump, electric steering motor, steering column shaft/couplings, pitman arm, idler arm, tie rod ends, and drag link.

COOLING - water pump, radiator, cooling fan, cooling fan motor, and fan clutch.

FUEL SYSTEM – fuel delivery pump, fuel injection pump, fuel injectors, fuel tank, metal fuel lines, fuel pressure regulator, fuel sending unit, fuel gauge, idle air control (IAC) module/valve and motor, engine control module (ECM), and fuel injection sensors.

BRAKE – master cylinder, power brake cylinder, vacuum assist booster, calipers, wheel cylinders, compensating valve, anti-lock brake system (ABS), hydraulic lines and fittings, and parking brake actuator.

ELECTRICAL – alternator, starter motor, starter solenoid, starter drive, power seat motor, satellite antenna power window motors, window regulators, windshield wiper motors, power door lock actuators, and driver information gauges and displays.

I PICKED
THE PERFECT
COVERAGE
FOR ME





See contract for details.

STAR COVERAGE



ENGINE – cylinder block, cylinder heads, all internally lubricated parts, turbocharger, supercharger, harmonic balancer; timing gear, chain, and belt; timing cover, intake and exhaust manifolds, valve covers, and oil pan.

TRANSMISSION – transmission case, all internally lubricated parts, and torque converter.

TRANSFER CASE – transfer case, all internally lubricated parts, and 4X4 actuator.

DRIVE AXLES – drive axle housing, all internally lubricated parts, drive shafts, universal joints, and constant velocity joints (excludes boot failures).

SEALS and GASKETS - leaking seals and gaskets on any covered part listed above. Minor loss of fluid or seepage is considered normal and is not considered a mechanical breakdown.



ADDITIONAL BENEFITS

ROADSIDE ASSISTANCE - Benefits include towing, flat tire changes, jump starts, fluid delivery, and lockout assistance. MAP covers up to \$100 per occurrence (less the cost of parts or fluids required).

TRIP INTERRUPTION - You also have the added benefit of expense coverage for overnight stays and meals incurred if you are stranded due to the failure of a covered breakdown and you are more than 100 miles from your home. MAP provides up to \$125 per day (maximum of 5 days) for trip interruption.

RENTAL REIMBURSEMENT - MAP provides up to \$40 per day (maximum of 5 days) for alternate transportation if your vehicle is in a repair facility undergoing repairs for a covered breakdown. For 4 Star coverage only, the total dollar limit is increased to \$560 or up to 14 days if repairs are delayed due to the manufacturer's failure to deliver replacement parts.

UNLIMITED NUMBER OF CLAIMS - The number of claims on your vehicle is unlimited. See your contract for details on payable claims.

NATIONWIDE COVERAGE - MAP is honored in both the United States and Canada. If you happen to be traveling, you can have confidence that repairs of a covered component will be taken care of for you. Just call our toll free number for prior approval.

PROTECT YOURSELF AGAINST THE HIGH COST OF UNEXPECTED REPAIRS.

POWER WINDOW MOTOR
\$650

DRIVE AXLES
\$696

FUEL PUMP
\$1,083

TRANSMISSION
\$3,046

POWER STEERING
\$1,693

TRANSAXLE
\$4,206

ALTERNATOR
\$784

RADIATOR
\$635

AIR CONDITIONING
\$1,414

ENGINE CONTROL MODULE
\$640

DISK BRAKE CALIPER
\$427

FUEL INJECTORS
\$1,064

WATER PUMP
\$912

ENGINE
\$5,518



Mechanical Breakdown Coverage

Unexpected car repairs always come at the worst time, and usually when you can't afford it.

A MAP vehicle service contract provides you with the coverage you need when you need it most.

Add coverage and subtract the headache and inconvenience of expensive repair costs.

MAP keeps you going and protects your time and money!